



Freeze Watch™ Indicators

Providing a visual history of freezing temperature exposure



1

3M™ Freeze Watch™ Indicators are ideal for monitoring pharmaceutical products—including vaccines, medicines and chemicals—that run the risk of being damaged when exposed to freezing temperatures during shipment and storage.


The patented design of Freeze Watch indicators consists of a highly sensitive indicating liquid inside a specially designed ampule. When exposed to freezing temperatures, the ampule fractures, releasing a liquid. The liquid

irreversibly stains a paper behind the ampule, providing a warning that product quality testing should be performed.


Freeze Watch indicators are available at two temperature levels, -4°C (25° F) and 0°C (32°F), to accommodate differing product sensitivities.

Placed directly on secondary shipper boxes of temperature-sensitive products during shipment and storage, the indicators provide a reliable measure of temperature exposure.

3M™ Freeze Watch™ Indicators

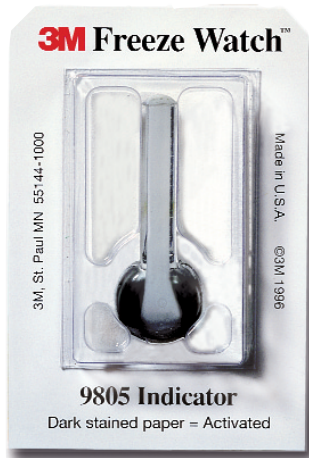

Non-Activated

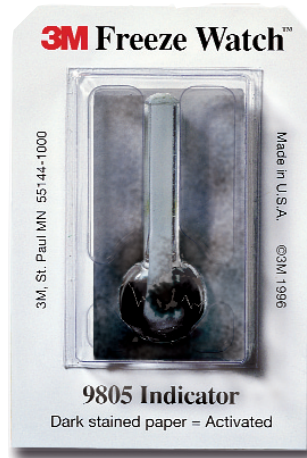

Activated

When exposed to sub-freezing temperatures, the liquid in the ampule freezes, causing the ampule to fracture and stain the indicator paper.

Ordering Information

3M Freeze Watch Indicators

Product	Activation Temperature
9800FW (9800)	-4°C (25°F)
9805FW (9805)	0°C (32°F)

Size: 2-1/4" x 1-1/2" x 1/4" thick (approx.)

Backing: Adhesive backed with peel off release liner.

Packed: 400 units per case

The 3M Freeze Watch indicators monitor temperature exposure, not product quality. Their purpose is to signal when product quality should be checked.

Warranty Information: All statements, technical information and recommendations herein are based on tests 3M believes to be reliable, but the accuracy or completeness thereof is not guaranteed. 3M WARRANTS ONLY THAT THE PRODUCT WILL MEET 3M'S SPECIFICATIONS AT THE TIME OF SHIPMENT TO THE CUSTOMER. THE FOREGOING WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. 3M RESERVES THE RIGHT TO MAKE MINOR MODIFICATIONS TO ITS PRODUCT SPECIFICATION WITHOUT NOTICE TO OR CONSENT OF THE CUSTOMER.

Limitation of Remedies: If the product is proved to be defective, the sole and exclusive remedy available and 3M's only obligation shall be at 3M's option, to replace such quantity of the product which is proved to be defective or to refund the purchase price paid for the Product.

Limitation of Liabilities: 3M shall not be liable to any party for any direct, indirect, incidental, special and/or consequential damages, including lost profits, regardless of the legal theory asserted, including negligence and/or strict liability. The foregoing limitations of remedies and liabilities may not be changed by any representation before, during, or after the sale of the Product.

Europe

3M Germany
49-2131-140

Australia

3M Australia, Pty Ltd.
2-9498-9333

Brazil

3M DO Brasil Ltd.
0800153131

China

3M China Limited
21-6275-3535

Mexico

3M Mexico, S.A. de C.V.
Especialidades Medicas
5-728-2202

Puerto Rico

3M Puerto Rico, Inc.
750-3000

For Fax-On-Demand Service
1-800-901-8106 U.S./Canada
1-650-596-4469 International



Health Care

3M Center, Building 275-4E-01
St. Paul, MN 55144-1000
USA
1 800 228-3957

3M Canada Inc.

Post Office Box 5757
London, Ontario N6A 4T1
Canada
1 800 364-3577

How to Use 3M Freeze Watch Indicators:

1. Attach the Freeze Watch indicator using the pressure sensitive adhesive on the back. Peel the release liner off the back and adhere the indicator to a clean, dry surface.
2. Before reading, the indicator should be in an area above freezing temperature for at least fifteen minutes.
3. To detect if the product has been exposed to freezing temperatures, observe the Freeze Watch indicator. If the indicator paper is stained with color, your product has been exposed.
4. If the indicator paper shows no color indication, remove indicator from the surface to which it is attached. Vigorously tap the bottom edge of the indicator three times on a hard surface. If the paper becomes stained, your product was exposed to freezing temperatures. Tapping will not cause color staining in an unexposed indicator.

Storage:

To prevent premature indication, keep from freezing prior to use. Storage in a controlled environment at 5° to 32°C (41° to 90°F), 20 to 60% relative humidity, is suggested.

Shelf Life:

If stored at suggested conditions, shelf life for the 9800FW, -4°C indicator is three years from date of manufacture and two and one-half years for the 9805FW, 0°C indicator.



40% pre-consumer waste paper
10% post-consumer waste paper

Printed in U.S.A.
© 3M 1998 70-2009-0759-3(38.5)ii