


RETORT-CHECKS Selection Chart

For Steam Pressure Cooking

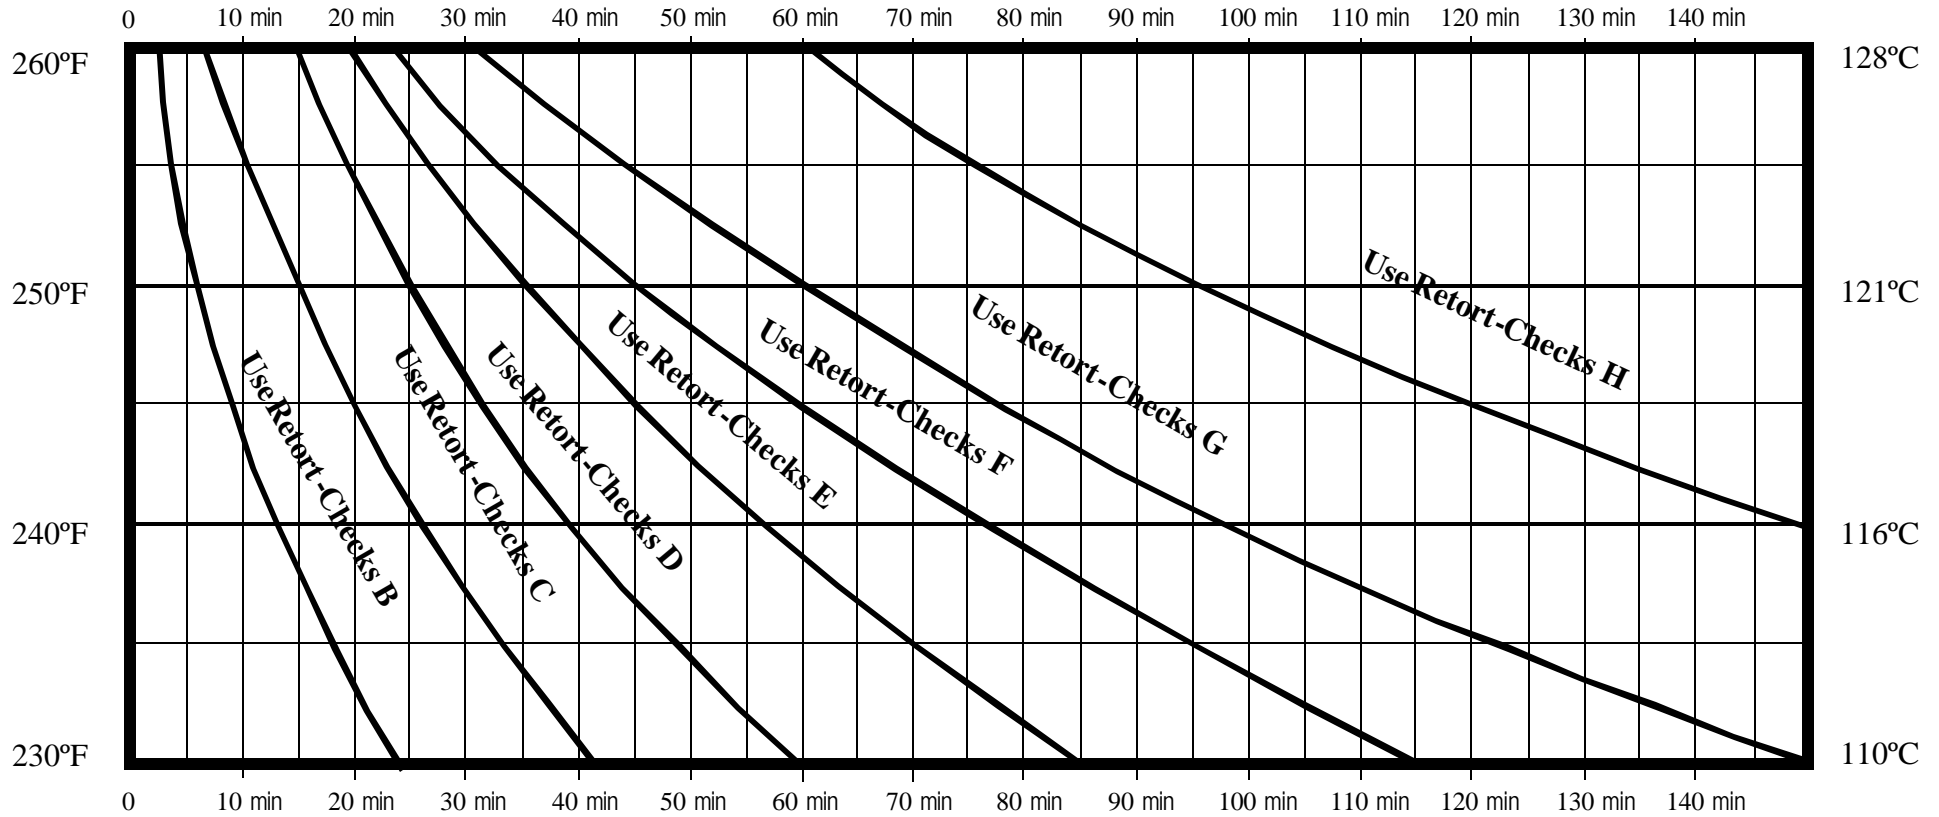

HOW TO SELECT THE CORRECT INDICATOR FOR YOUR COOKING PROCESS

Find the time/temperature position of your cook on the graph above. Use the Retort-Checks as described in the areas between the performance curves. If your cook falls directly on a performance curve, use the indicator designated to the left.

The performance of Retort-Checks indicators are represented by the seven curved lines shown above. Each Retort-Checks will complete its color change to green just prior to the time/temperature intersection labeled for its use. For example, Retort-Checks G will turn color to green at approximately 60 minutes at 250°F. It should be used for cooking times between 60 minutes and 95 minutes at 250°F, or any of the other time/temperature combinations shown in the area marked, "Use Retort-Checks G". The time required for each type of Retort-Checks to turn to green at 250°F is shown on the adjoining table.

SPECIFICATIONS FOR RETORT-CHECKS INDICATORS AT 250°F/121°C SATURATED STEAM	
RETORT-CHECKS	TIME TO COMPLETE COLOR CHANGE
B	6 MINUTES
C	15 MINUTES
D	25 MINUTES
E	35 MINUTES
F	45 MINUTES
G	60 MINUTES
H	95 MINUTES

