

TEMPASURE


QUALITY ASSURANCE FOR "LOW TEMPERATURE" SENSITIVE PRODUCTS




TEMPASURE offers a highly reliable and irreversible indication of exposure to low temperatures. Using a patented mechanism, the **TEMPASURE** indicator clearly shows when the product to which it is attached has been subjected to low temperatures. Such temperatures could have detrimental effects on goods like refrigerated pharmaceuticals, foods, chemicals or medical devices.

SMALL, LIGHT AND ACCURATE


Because **TEMPASURE** is so sturdily constructed, it can be relied upon to give an accurate indication to within +/- 2°C, whether in storage or in transit. And at a compact size of only 54.3mm/2.14" long, 17.5mm/0.69" wide, 5.5mm/0.22" thick and weighing only 4.25g/0.15oz, **TEMPASURE** is significantly smaller than any other similar product.

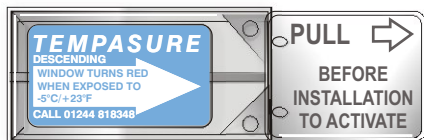

SIMPLE INSTALLATION Allow sensor to stabilize at product temperature. Pull safety TAB to activate sensor. Attach with self-adhesive backing.

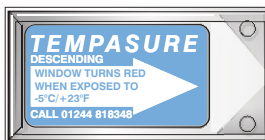

A clear window indicates the unit has not been exposed to critical low temperature.

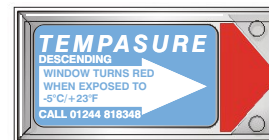

The indicator clearly shows a red window when the product has experienced freezing conditions.

A TEMPASURE FOR EVERY APPLICATION


TEMPASURE is available in a standard range shown in the table below. In addition, special customer orders can be accommodated over a temperature range of -20°C to +40°C.

CRITICAL TEMPERATURE	-10°C	-5°C	0°C	+2°C	+5°C	+10°C
MODEL NO.	D-10	D-5	D0	D+2	D+5	D+10

INFORMATION AND ORDERING

TEMPASURE is a brand of Thermographic Measurements Ltd., a world leader in temperature sensitive products. To obtain more information on solutions to temperature measurement problems, please fax us or phone us. Alternatively, write to the address below or E-mail us on sales@t-m-c.com.

WHEN QUALITY IS CRITICAL, BE TEMPASURE

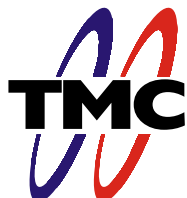

COLOUR CHANGE THERMOMETRY

THERMOGRAPHIC MEASUREMENTS LTD.
RIVERSIDE BUILDINGS, DOCK ROAD,
CONNAH'S QUAY, FLINTSHIRE. CH5 4DS.

TEL: +44 (0) 1244 818348 - FAX: +44 (0) 01244 818502

E-MAIL: sales@t-m-c.com - WEB SITE: www.t-m-c.com